

Yale Zuri S User Manual
Material: 80g offset uncoated paper / two-sided & single black color printing / concertina fold
Size: 180*115mm 16pages 460*360mm

Material: 80g offset uncoated paper / two-sided & single black color printing / concertina fold

Size:180*115mm 16pages 460*360mm

Yale Zuri S

Product features and design may be updated for improvement without prior notice.

Table of Contents

1. Product introduction	01
1.1 Product parts list	01
2. Operation settings	02
2.1 Factory default settings	02
2.2 Factory reset	02
2.3 Administrator and user ID	03
2.4 Icons description	03
2.5 Add administrator code	03
2.6 Add / delete fingerprint user	03
2.7 Add / delete PIN code user	04
2.8 Add / delete RFID key tag	04
2.9 Delete all user credentials	04
2.10 Language setting	05
2.11 Clutch autolock setting	05
2.12 Bluetooth setting(optional)	05
3. Usage of product	06
3.1 Unlock method	06
3.1.1 Fingerprint, PIN code and RFID key tag	06
3.1.2 Unlock door with smart etiquette	06
3.1.3 Mechanical override key	07
3.2 Secure the lock	07
3.3 Internal forced lock	08
3.4 Protection and alarms	08
3.4.1 Low battery alarm	08
3.4.2 Tampering alarm	09
3.4.3 3-mins lock-out	09
3.5 Emergency power supply	09
3.6 About battery	10
3.6.1 Battery lifespan	10
3.6.2 Low battery alarm	10
3.6.3 How to change battery	10
3.7 System restart	10
3.8 Yale Home App(optional)	11
4. Daily maintenance	12

2. Operation Settings

2.1 Factory default setting

Notes

- Any fingerprint can unlock the door at factory default setting.
- No factory default administrator code. For optimum security, please register the administrator code before using the product.
- Administrator code is required for all menu operations.

2.2 Factory reset

- Remove battery cover from the main body.
- To cut off the power supply, remove one of the alkaline battery.
- Press and hold (R) button until the completion of step 4.
- Reinstall the battery, release (R) button when you hear voice guide "in progress", and the system is now at initializing stage.
- After few seconds, the smart lock factory reset is completed when you hear voice guide "factory reset completed".

--02--

1. Product Introduction

1.1 Product parts list

The pictures in this user guide are for illustration purpose only, actual product or parts may vary

--01--

2.3 Administrator and user ID

Administrator code (4~10 digits)	Administrator code is required for all menu operations
User ID (3 digits)	System generates user ID automatically during registration of fingerprint, PIN and card for addressing purpose (User ID: 001~100 each fingerprint, PIN and RFID key tag).

2.4 Icons description

	Back, delete		RFID key tag
	Enter, confirm		Fingerprint
	Registration		PIN code

2.5 Add administrator code

Only one administrator code can be set and the administrator code is required for user management and various function settings.

Step	1	2	3	4	5	6	7	8	9	10
Add Administrator code		enter (4~10 digits)	#	Repeat (4~10 digits)	#					

2.6 Add / delete fingerprint user

Step	1	2	3	4	5	6	7	8	9	10
Add		Admin-istrator code	#	1	1					
Step	1	2	3	4	5	6	7	8	9	10
Delete		Admin-istrator code	#	2	1	1	User ID	#		

Notes

- Maximum fingerprint user: 100 users (user ID range from 001~100).
- Please ensure user IDs assigned are recorded. The user ID is required for the deletion of the respective fingerprint user.
- Please follow voice-guided instruction to scan the fingerprint accordingly.
- When collecting fingerprints, try to collect as many times as possible from different locations on the same finger, so that the subsequent verification of fingerprints is easier to be recognized.

--03--

2.7 Add / delete PIN code user

Step	1	2	3	4	5	6	7	8	9	10
Add		Admin-istrator code	#	1	2		#		#	
Step	1	2	3	4	5	6	7	8	9	10
Delete		Admin-istrator code	#	2	1	2	User ID	#		

Notes

- Maximum PIN code user: 100 users (user ID range from 001~100).
- Please ensure user IDs assigned are recorded. The user ID is required for the deletion of the respective Pin code user.

2.8 Add / delete RFID key tag

Step	1	2	3	4	5	6	7	8	9	
------	---	---	---	---	---	---	---	---	---	--


360 mm

460 mm

3. Usage of Product

3.1 Unlock method

3.1.1 Fingerprint, PIN code and RFID key tag

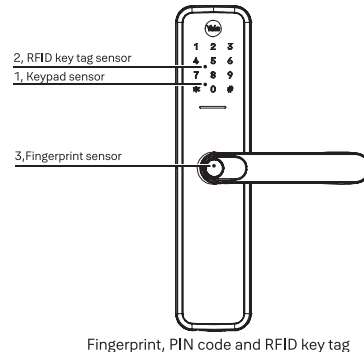

Fingerprint, PIN code and RFID key tag


1. Palm touch to activate the keypad, enter PIN code and press (#) to confirm.
2. Place RFID key tag on RFID key tag sensor.
3. Place registered fingerprint on fingerprint sensor.

Notes

- Security enhancement to enter any number before or after entering a PIN code to prevent the PIN code from being exposed.
The real password is placed first or last, for Example: (*****123888 Or 123888*****)+(#), "*****" is password.

3.1.2 Unlock door with smart etiquette


Activate silent mode to unlock the smart lock in silent. (voice notification muted)

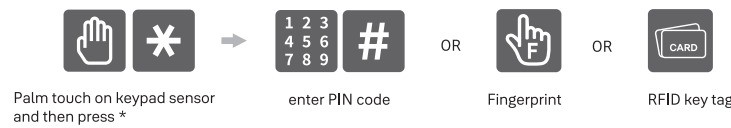

--06--

3.1.3 Mechanical override key


In the event of an emergency, such as forgetting password, running out of battery or other unexpected circumstances, the mechanical override key can be used as back up to unlock the product.

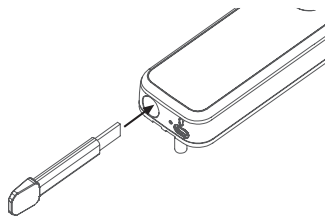

1. Find the cylinder hole at the bottom of the front lock body.
2. Insert mechanical override key and turn.


3.2 Secure the Lock

Once the door is closed, lift up handle to secure the lock.

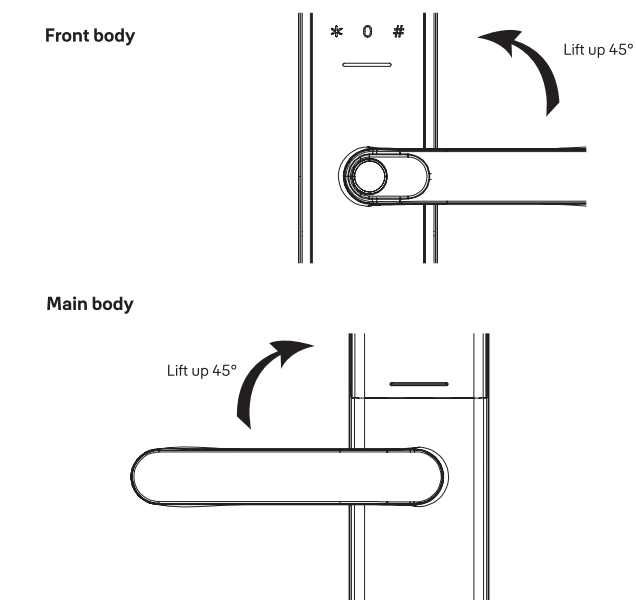

--07--

3.3 Internal forced lock

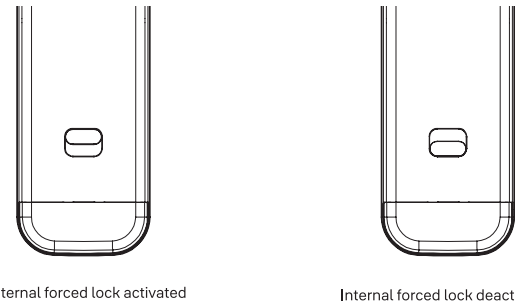

Alarm

Once internal forced lock function is activated, fingerprint, PIN code and RFID key tag will be **NOT** able to unlock. But administrator code and override key still can be used to unlock.

3.4 Protection and alarms

3.4.1 Low battery alarm

When the battery power is low, voice guide will be prompted "low battery, please replace new battery" for every subsequent unlocking operation. At the same time, The red led will turn on, in the situation, the digital lock can only be operated about 50-60 times. Please be reminded to replace with new batteries as soon as possible when the voice prompted.

--08--

3.4.2 Tampering alarm

A tampering alarm will be triggered when the front body is detached forcefully.
To deactivate the alarm, please press the Registration button(R).

3.4.3 3-mins lock-out

When either fingerprint, RFID key tag or PIN code accumulated with 5 failed attempts within 3 minutes, the 3-mins lock-out will be triggered with keypad backlight flashes.


1. The 3-mins lock-out will be lifted after 3 mins.
2. Other deactivation methods:
(1) Press the Registration button (R) at the main body.
(2) Switch the internal forced lock knob at the main body.
(3) For networking version, the 3-mins lock-out can be deactivated using Yale Home APP unlock function.

Notes

- When alarm is triggered, the alarm will be deactivated automatically after 3 mins, or to deactivate it manually, please press registration button.

3.5 Emergency power supply

When the product is out of battery and not able to operate, an emergency power supply can be plugged into the emergency power supply port via type-C USB cable for emergency access.

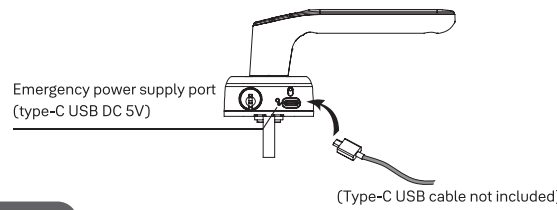

Notes

- Emergency power supply is only used for emergency purpose and it is not recommended for frequent use.
- DC 5V power supply is needed with Type-C USB cable.
- Battery charging is not supported.

--09--

3.6 About battery

3.6.1 Battery lifespan


Powered by 4 x AAA Alkaline batteries. Estimated lifespan is around 8 months (daily 10 times usage, however, it may vary depending on actual usage.)

3.6.2 Low battery alarm

Please be reminded to replace with new batteries as soon as possible when the voice prompted.

3.6.3 How to change battery

1. Remove battery cover from main body
2. Remove old batteries and replace with new batteries
3. Secure the battery cover

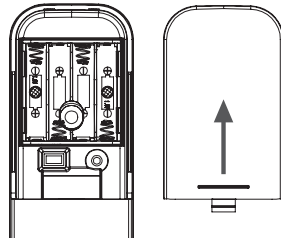


Notes

- For new battery replacement, please change all 4 x AAA Alkaline batteries, do not mix old and new batteries or mix different battery brand as it may affect the product performance.

3.7 System restart

In the event if there is any system error and not able to operate the product, use a tool to press the system restart button for a reboot.

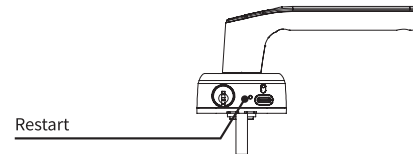

--10--

3.8 Yale Home App* & Yale Connect Wi-Fi Bridge/Hub** set-up guide

- * For CONNECTED version lock only. Please follow manual section 2.12 Bluetooth setting to do "Bluetooth set" before using Yale Home App.
- ** The Yale Connect Wi-Fi Bridge /Hub is NOT included.

Step1: Download the Yale Home App from the Google Play Store or Apple App Store.



Step2: Scan the QR code which can be found on the back of your smart lock or below and follow the in-app instructions.



If you have any questions, please contact us at:
www.yalehome.com

Google Play and the Google Play logo are trademarks of Google LLC.
Apple, the Apple logo, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries and regions. App Store is a service mark of Apple Inc.

--11--

4. Daily maintenance

1. Do not install the product in an outdoor environment with direct exposure to weather.
2. To prevent dirt on keypad and fingerprint sensor area, we recommend to use soft cloth for wipes. Do not spray water directly or wipe with chemicals such as benzene, gasoline or alcohol.
3. Please use good quality alkaline batteries. It is recommended to replace the batteries every 6 months and check for battery leakages periodically.
4. It is recommended to replace the battery immediately when "low battery" alarm is triggered to avoid any inconvenience.
5. Adjustment of the striker plate is recommended if the deadbolt is not able to retract or recede well due to door deformation.
6. The mortise may be damaged if the door is closed hard with the deadbolt protruded.
7. Please keep at least 1 mechanical override key out of the house (office / parents' house) for emergency use when needed.
8. When the battery is out, an emergency power supply can be used through the emergency power supply port via type-C USB cable for emergency power supply.

--12--